



INSTRUCTION BULLETIN

No. 340886

Machine: ATLV4300, 6550,
6600/6650, 7400, 8410

Published: 09-2008

Rev. 00

NOTE: DO NOT DISCARD the Parts List from the Instruction Bulletin. Place the Parts List in the appropriate place in the machine manual for future reference. Retaining the Parts List will make it easier to reorder individual parts and will save the cost of ordering an entire kit.

NOTE: Numbers in parenthesis () are reference numbers for parts listed in Bill of Materials.

Installation instructions for **kit number 9004540**

SYNOPSIS:

This kit contains the parts needed to replace the rear taillight on ATLV4300, 6550, 6600/6650, 7400, and 8410 machines.

Please follow step-by-step instructions.

SPECIAL TOOLS / CONSIDERATIONS: NONE

(Estimated time to complete: 15-30 minutes)

PREPARATION:

1. Park the machine on a clean level surface, turn off the machine, remove the key, and set the parking brake.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, and remove key.

2. Disconnect the battery cables from the battery.



WARNING: Always disconnect battery cables from machine before working on electrical components.

INSTALLATION:

1. Disconnect the wire harness from the existing taillight.
2. Note the connector/connectors used to connect the taillight to the main harness and taillight wire locations to the wire harness. The new taillight (1) must be attached to the harness the same as the old taillight.
3. Remove the existing taillight from the machine. Set the hardware aside.
4. If the connector on the taillight is not used, cut the connector from the taillight wires. Discard the connector.

5. Install the terminals (2) and (3) onto the taillight wires if the connector was cut from the taillight (1) in the previous step. Check the terminals on the removed taillight wires for terminal locations.
6. Use the saved hardware to install the new taillight (1) onto the machine. If the holes in the taillight do not align with the holes in the taillight bracket, remove the lens from the taillight, use the taillight base as a template to drill new holes into the bracket, reinstall the lens onto the base, and install the taillight.
7. Connect the wire harness to the taillight (1).
8. Reconnect the battery cables to the battery.
9. Start the machine and turn on the operating lights. Ensure the taillight is operating.
10. Discard old taillight.

Bill of Materials for Taillight Kit, 12VDC, Replmt - 9004540

	Ref.	Tennant Part No.	Description	Qty.
▽		9004540	Taillight Kit, 12VDC, Replmt	1
▲	1	1033578	Taillight, 12VDC, 6.3 X 2.5	1
▲	2	55272	Terminal, Bullet, Mal, .157D, 12Ga	3
▲	3	29192	Terminal, Ring, 25 Stud 16-14Ga, Ins	1

TENNANT COMPANY
P. O. Box 1452
Minneapolis, MN 55440-1452