



INSTRUCTION BULLETIN

No. 2851

Machine: 140E

Published: 8-91/01

NOTE: DO NOT discard Parts List from Instruction Bulletin. Place Parts List in the appropriate place in your machine manual for future reference. Retaining the Parts List will make it easier to reorder individual parts and will save you the cost of ordering an entire kit.

Installation Instructions for TENNANT Label Kit 02575.

This kit contains parts needed to install labels on the machine listed above. Please follow step-by-step instructions.

PLEASE NOTE: Labels must be ordered in sets, and cannot be ordered separately.

INSTRUCTIONS:

(Refer to Figures 1 2, and 3)

FOR SAFETY: Before leaving or servicing machine, stop on level surface and set parking brake (if equipped on machine). Then turn off machine and remove key.

1. Disconnect battery cables from machine.



WARNING: Always disconnect battery cables from machine before working on electrical components.

2. Thoroughly clean painted surface with isopropyl alcohol, Prep Sol, Emulso Degreaser or lacquer thinner.



WARNING: Flammable materials can cause an explosion or fire. Keep flames and sparks away from area.

- a. Apply cleaning solution to painted surface. Rinse and dry thoroughly.
 - b. **To check for cleanliness:** Spray a fine mist of distilled water on cleaned surface. If water “beads up”, repeat step 2a. If water covers cleaned surface with a uniform film of water, the cleaning operation was done properly.
3. Mark position for label.
 4. Fold label back and pull liner paper from label.

NOTE: If label is pulled from liner paper the label could tear or break.

5. Align one edge of label on machine, then press down with your fingers.
6. With a squeegee, work away from attached edge of label using overlapping strokes. Always start at the center or at one corner of label and work toward outer edges to avoid trapping air.

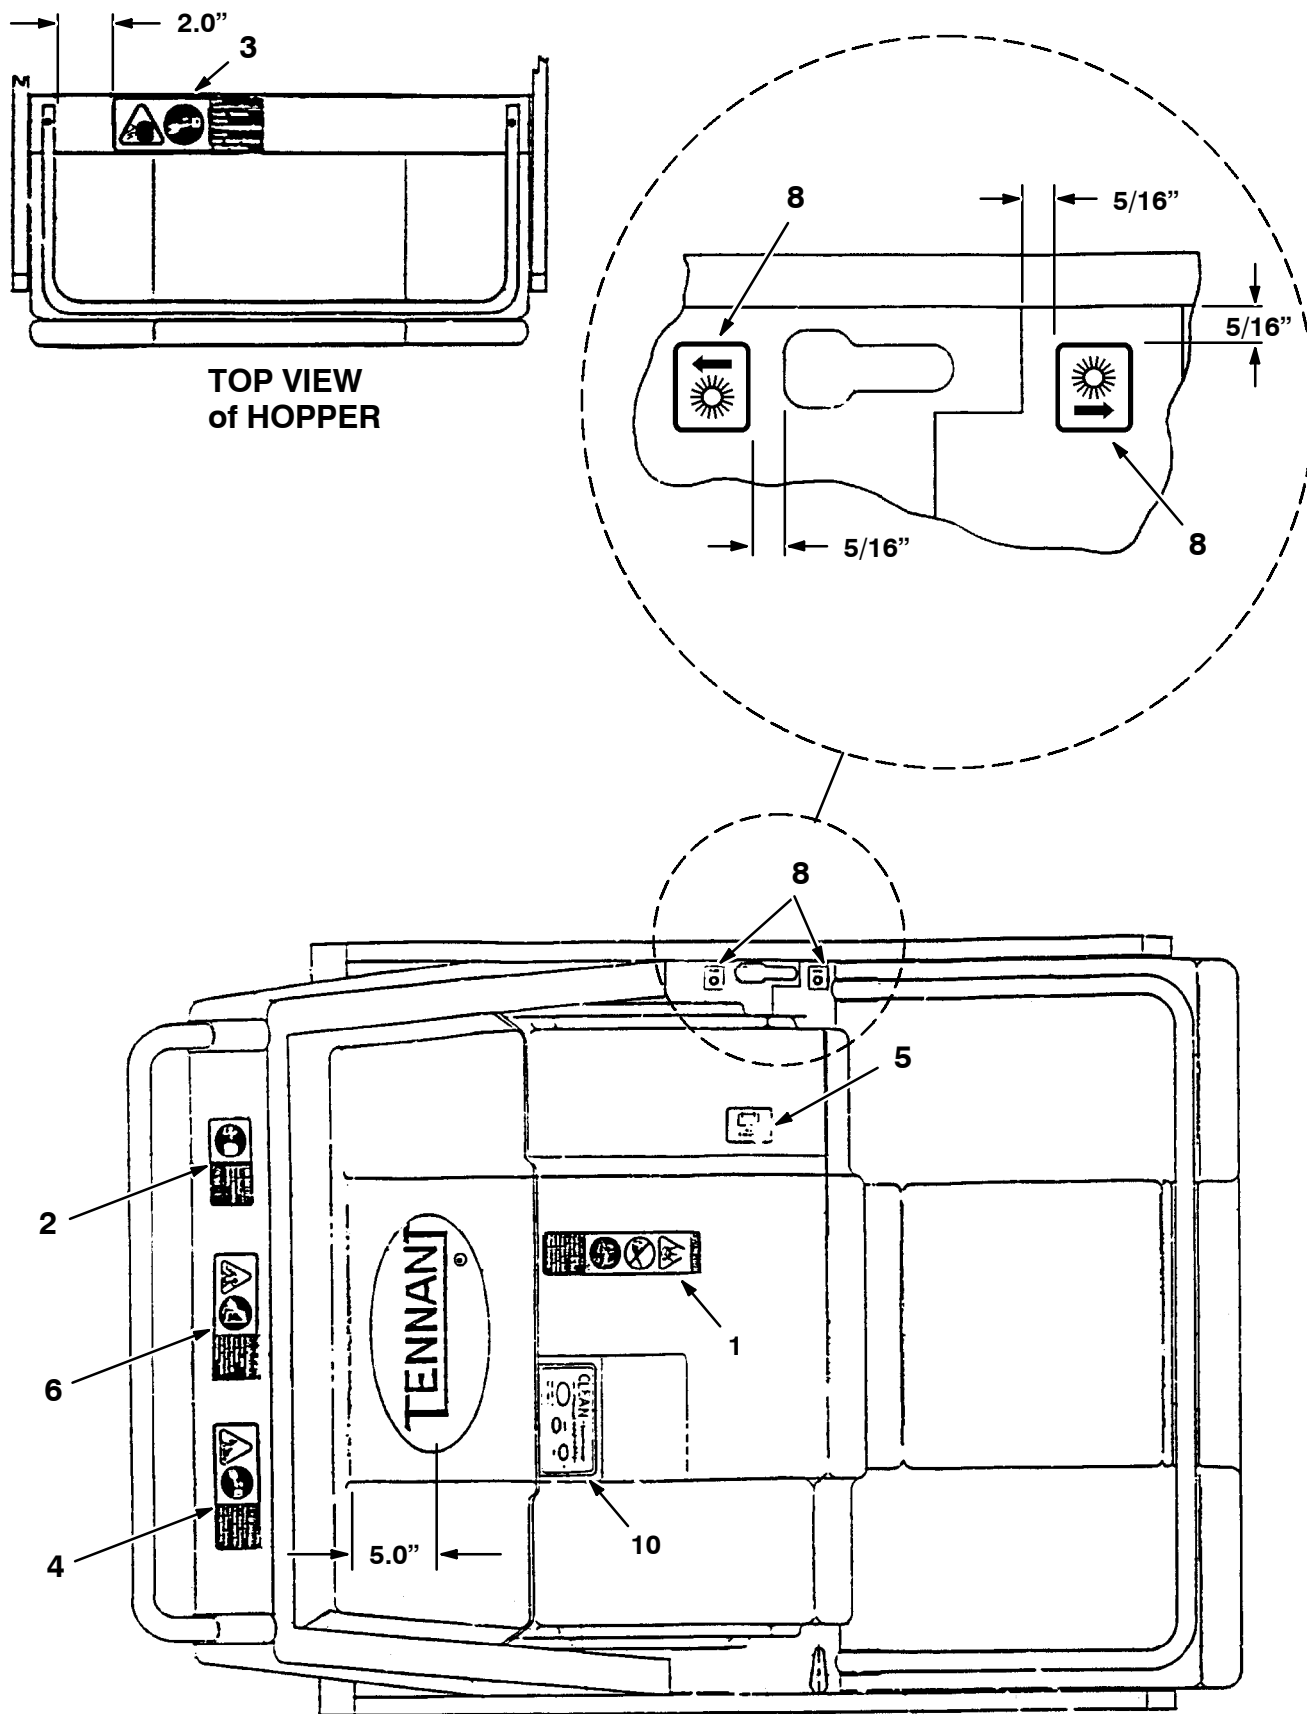


FIG. 1 – Label Locations

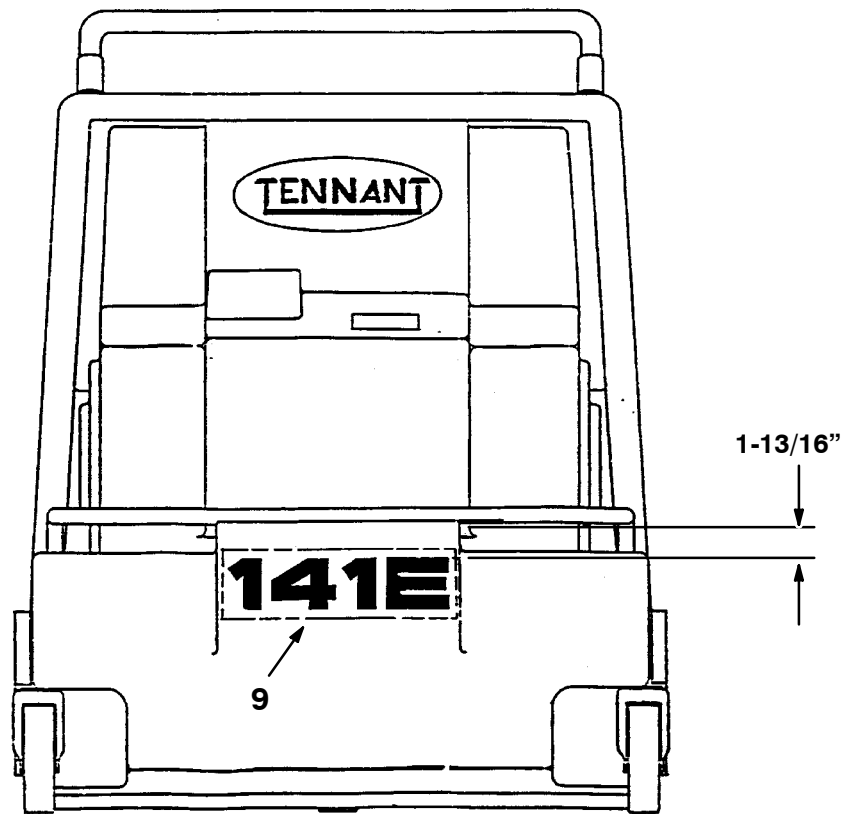


FIG. 2 – Label Location

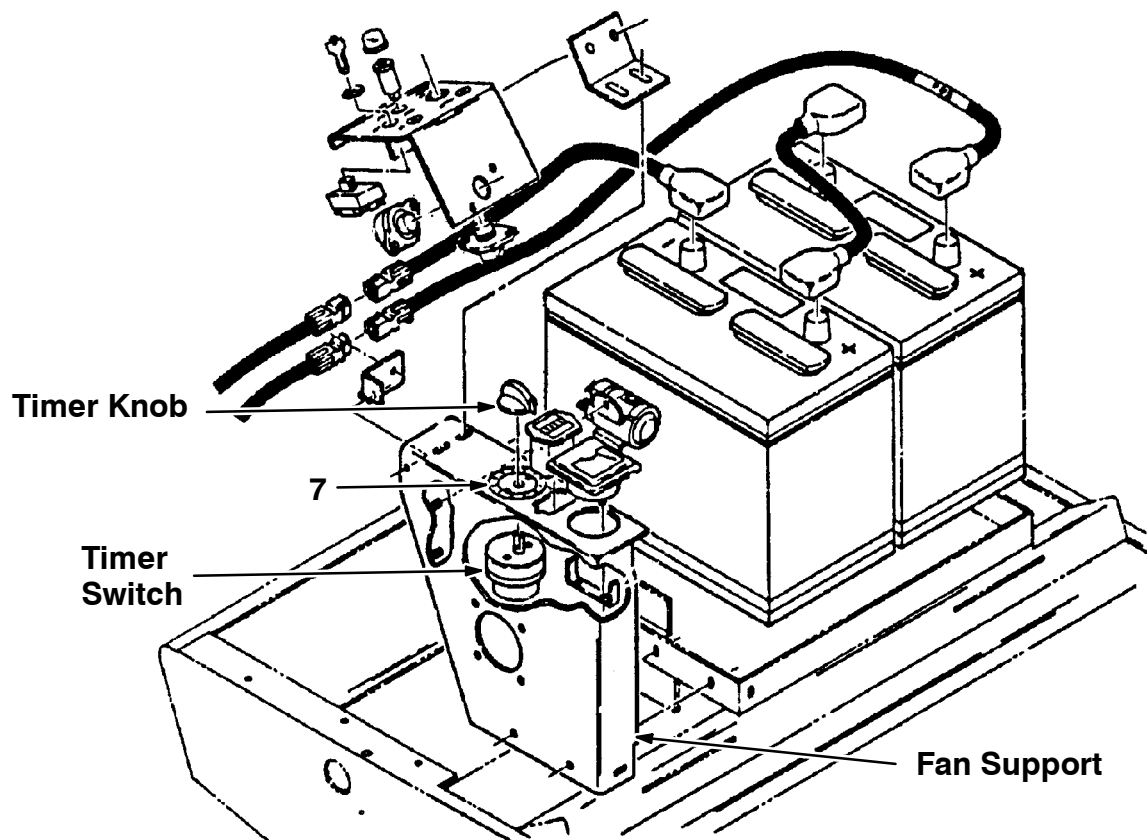


FIG. 3 – Label Location

BILL OF MATERIALS FOR 140E LABEL KIT 02575

Key	TENNANT Part No.	Description	Qty.
	25977	140L Info and hazard label set	1
1	11513	140E Hazard, Charging label	1
2	11539	Hazard, For safety label	1
3	25972	Hazard, Hopper lift label	1
4	25137	Hazard, Creeping label	1
5	25975	140E Battery requirement label	1
6	25974	140G Hazard, Emissions label	1
7	41609	Dual scale timer label, 60hz	1
8	41726	Main brush up & down label, International symbol	2
9	02560	140E numerals label	1
10	25117	140 Instrument panel label	1
11	60492	141E numerals label	1

TENNANT COMPANY
P. O. Box 1452
Minneapolis, MN 55440-1452