

Hercules Industrial User Interface  
PCA 1256673  
Revision C

Highlighted text needs to be updated. Any section header highlighted means  
entire section needs updating

**Revision Table**

Revision	Changes	Engineer	Date
A	Initial Version	BAP	2023-06-26
B	<ul style="list-style-type: none"><li>• Update the Setup Section</li><li>• Update Write Serial Number section</li><li>• Update Hour meter section to remove resistor from test</li><li>• Update Potentiometer check</li><li>• Add 2<sup>nd</sup> option to backup camera</li><li>• Update CAN bus section</li></ul>	BAP	2023-07-12
C	<ul style="list-style-type: none"><li>• Low side driver resistor changed from 12.1k to 1.12k</li><li>• Updated every section with new commands</li><li>• Consolidated Switch membrane test into the switch test</li></ul>	BAP	2023-07-26

**Table of Contents**

Setup: .....	2
Initialize FCT Mode:.....	2
Revision Verification:.....	3
Write Serial Number:.....	3
Serial Flash:.....	3
Trusted Platform Module (TPM):.....	3
RTC:.....	3
Power Input:.....	3
USB Power:.....	4

5V Sensor Power:.....	4
Digital Input:.....	4
Analog Input: .....	5
Low Side Driver Output:.....	5
Hour Meter Output:.....	6
Membrane LED:.....	6
Display Supply Test: .....	8
Potentiometer Check:.....	8
LCD Color:.....	8
Touchscreen: .....	8
Backlight Driver:.....	9
Backup Camera:.....	10
CAN Bus Loopback Test:.....	10
RS-232: .....	10
UART (5V):.....	10
USB Host: .....	11
USB device:.....	11

### **Setup:**

A fixture has connections with pogo pins for all necessary points. All Test commands are sent to the board using the UART debug port (J16). The board executes the commands and returns status over the same interface. The UART terminal should be configured for 115200 baud, 1 stop bits and 8 data bits. Operator input is required to verify LCD and touch panel function if the LCD is installed in the test fixture. The LCD may be omitted from the test fixture with prior approval from Tennant.

1. Install user interface assembly in machine.
2. Turn power on. Power supply is set to 24.0V and should be capable of driving a 2A load. Power is applied as indicated: COM goes to J3-1. +24V goes to J3-2 and J4-2. The board will not operate if J4-2 is below 8V.

### **Initialize FCT Mode:**

1. Login to the UART debug port. Username is “root” and password is “am4”. Note: the password characters will not echo back to the terminal for security reasons.
2. Initialize FCT mode by typing “fct” and pressing return.

### **Revision Verification:**

1. Read the software and hardware versions with the command “version”.
2. The SW revision shall match the revision number listed in the released drawing of 1266673.
3. The HW revision shall match the revision number listed in the released drawing of 1266673.

### **Write Serial Number:**

1. Write Tennant board serial number (where [SN] is the serial number on the board) to EEPROM by sending the following command over THE DEBUG INTERFACE: config w 499 [SN]

Response must include:

Writing of parameter: 499

2. Wait 5 seconds and cycle power to board.
3. Read the board serial number from memory by sending the following command over the debug interface: “**config r 499**”
4. Response must include the serial number written to the board.

### **Serial Flash:**

1. Programming the serial flash with the bootloader file will serve as the test. Successfully booting and logging into the terminal application is considered a pass.

### **Trusted Platform Module (TPM):**

1. Run command “tpm ?”
2. Confirm that the board ID is a non-zero number

### **RTC:**

1. All times shall be set to local manufacturing time
2. Set the seconds with the command “time s=XX”
3. Set the minutes with the command “time m=XX”
4. Set the hours with the command “time h=XX”
5. Save the time to the RTC with the command “time w”
6. Power cycle board for at least 10 seconds
7. Read back the time with the command “time ?”, and verify it has incremented for approximately the amount of time since it was set.

### **Power Input:**

1. Read status of battery power with command “power ?”

2. Battery voltage will be returned. `hw_Power_Batt_Plus_Voltage()` shall be  $24V \pm 2.2\%$
3. Read status of key switch power with command "power ?"
4. key switch voltage will be returned. `hw_Power_Battery_Voltage()` shall be  $24V \pm 2.2\%$
5. Apply 24V to J4-3
6. Read status of charger power with command "power ?"
7. Charger voltage will be returned. `hw_Power_Voltage_Charge_Interlock()` shall be  $24V \pm 2.2\%$
8. Run command "power ?"
9. `BATT+ LOW()` shall be false
10. `KEYSWITCH+ LOW()` shall be false
11. `CHARGER+ LOW()` shall be false
12. Lower voltage at J3-2, J4-2, and J4-3 to 6.5V
13. Run command TBD suggestion "power ?"
14. Batt low input shall be true
15. Key switch input shall be true
16. Charger input shall be true

#### **USB Power:**

1. Connect a 5W, 10Ω load to the +5V and GND connections of the USB A connector (J5-1 and J5-4)
2. J5-1 shall measure  $5V \pm 0.5V$
3. The USB switch has temperature based current limit feature. It will limit the current at approximately 1.5A
4. Connect a 25W, 1.5Ω load to the +5V and GND connections of the USB A connector (J5-1 and J5-4)
5. This will draw 3.33A through a circuit with a 1.5A current limit
6. Send command "usb ?"
7. `hw_USB_Over_Current()` shall read "True"

#### **5V Sensor Power:**

1. Measure J18-13 WRT J18-14 with a DMM. Must measure  $5.0V \pm 1V$ .
2. Apply a 50Ω 1W load between J18-13 and J18-14
3. Measure J18-13 WRT J18-14 with a DMM. Must measure  $3.27 \pm 0.5V$ .
4. Remove load from connector J15

#### **Digital Input:**

1. Read inputs with command inputs ?
2. All inputs shall be false

3. Refer table below for pin mapping of each input. Each input shall change state to True when bias is applied.

Input Name	Bias and Pin	FCT mapping
Membrane 0	Connect J8-2 to J8-3	Switch 0
Membrane 5	Connect J8-5 to J8-4	Switch 5
Membrane 10	Connect J8-7 to J8-6	Switch 10
Membrane 15	Connect J8-9 to J8-8	Switch 15
Mem_digin_1	Apply GND to J10-1	Switch 16
Mem_digin_2	Apply GND to J10-2	Switch 17
Digin_1	Apply 24V to J4-6	Switch 18
Digin_2	Apply 24V to J18-4	Switch 19
Digin_3	Apply 24V to J18-5	Switch 20
Digin_4	Apply 24V to J18-6	Switch 21
Digin_5	Apply GND to J18-7	Switch 22
Digin_6	Apply GND to J18-8	Switch 23
Digin_7	Apply GND to J18-9	Switch 24
Digin_8	Apply GND to J18-10	Switch 25

#### **Analog Input:**

1. Read analog inputs with the command `ainputs ?`
2. Under IIO 1, `ainputs_State(in_voltage2_raw)` and `ainputs_State(in_voltage3_raw)` shall be 0V
3. Apply 3V to J18-11
4. Read analog inputs with the command `ainputs ?`
5. AIN\_1 reading shall be  $3V \pm 5\%$
6. Apply 4V to J18-12
7. Read analog inputs with the command `ainputs ?`
8. AIN\_1 reading shall be  $4V \pm 5\%$

#### **Low Side Driver Output:**

1. Connect a 1.21k 1W resistor to each of the following pins
  - a. J19-1 to J3-2.
  - b. J19-2 to J3-2
  - c. J19-3 to J3-2
  - d. J19-4 to J3-2
  - e. J19-5 to J3-2
  - f. J19-6 to J3-2
  - g. J19-7 to J3-2
  - h. J19-8 to J3-2

2. Enable all low side drivers by sending the following command: lsd e=0
3. Turn on low side driver 1 output by sending the following command: lsd e=1
4. Confirm the driver turned on by measuring J19-5. J19-5 must measure less than 1V WRT GND.
5. Turn off low side driver 1 output by sending the following command: lsd d=1
6. Repeat steps 2 through 4 for all 8 low side drivers
7. Low side driver chart with commands for reference
8. Disable all LSDs by sending the following command: lsd e=0

LSD Name	Pin Number	Turn ON Command	Turn OFF Command
LSD_1	J19-1	lsd e=1	lsd d=1
LSD_2	J19-2	lsd e=2	lsd d=2
LSD_3	J19-3	lsd e=3	lsd d=3
LSD_4	J19-4	lsd e=4	lsd d=4
LSD_5	J19-5	lsd e=5	lsd d=5
LSD_6	J19-6	lsd e=6	lsd d=6
LSD_7	J19-7	lsd e=7	lsd d=7
LSD_8	J19-8	lsd e=8	lsd d=8

#### **Hour Meter Output:**

1. Enable hour meter with command “hour e”
2. Measure J3-6 with a DMM. Measurement shall be  $5V \pm 0.5V$
3. Turn of hour meter with command “hour d”

#### **Membrane LED:**

1. The test setup should have a 1.5kohm load resistor from each LED output LED1 through LED32 to 3.3V.
2. Turn off all LEDs by sending the following command over THE DEBUG INTERFACE: “led o=0”
3. Confirm that all membrane panel LEDs are turned off by sending the following command over THE DEBUG INTERFACE: “led o=0”.
4. Confirm that J8-10 through J8-24 and J8-28 through J8-44 are all turned off.
5. Turn on LED 1 by sending the “led e=1” command over THE DEBUG INTERFACE. The response must include:  

```
led_Set(1, 1:LED_MODE_ON,False)
```
6. Confirm that J8-10 is turned on.
7. Turn off LED 1 by sending the “led d=1” command over THE DEBUG INTERFACE. The response must include:  

```
led_Set(1, 1:LED_MODE_ON,False)
```
8. Confirm that J8-10 is turned off
9. Repeat steps 5 through 8 for all 32 LEDs.

10. LED chart with commands for reference:

LED Name	Pin Number	Turn ON Command	Turn OFF Command
LED_1	J8-10	led e=1	led d=1
LED_2	J8-11	led e=2	led d=2
LED_3	J8-12	led e=3	led d=3
LED_4	J8-13	led e=4	led d=4
LED_5	J8-14	led e=5	led d=5
LED_6	J8-15	led e=6	led d=6
LED_7	J8-16	led e=7	led d=7
LED_8	J8-17	led e=8	led d=8
LED_9	J8-18	led e=9	led d=9
LED_10	J8-19	led e=10	led d=10
LED_11	J8-20	led e=11	led d=11
LED_12	J8-21	led e=12	led d=12
LED_13	J8-22	led e=13	led d=13
LED_14	J8-23	led e=14	led d=14
LED_15	J8-24	led e=15	led d=15
LED_16	J8-28	led e=16	led d=16
LED_17	J8-29	led e=17	led d=17
LED_18	J8-30	led e=18	led d=18
LED_19	J8-31	led e=19	led d=19
LED_20	J8-32	led e=20	led d=20
LED_21	J8-33	led e=21	led d=21
LED_22	J8-34	led e=22	led d=22
LED_23	J8-35	led e=23	led d=23
LED_24	J8-36	led e=24	led d=24
LED_25	J8-37	led e=25	led d=25
LED_26	J8-38	led e=26	led d=26
LED_27	J8-39	led e=27	led d=27
LED_28	J8-40	led e=28	led d=28
LED_29	J8-41	led e=29	led d=29
LED_30	J8-42	led e=30	led d=30
LED_31	J8-43	led e=31	led d=31
LED_32	J8-44	led e=32	led d=32

**Display Supply Test:**


5. Measure J15 pin 1 WRT common with a DMM. Must measure  $5.0V \pm 1V$ .
6. Apply a  $50\Omega$  1W load between pins 1 and 2 of connector J15
7. Measure pin 1 WRT common with a DMM. Must measure  $3.27 \pm 0.5V$ .
8. Remove load from connector J15

**Potentiometer Check:**

1. Apply 3.3V to pin 5 of connector J14
2. The voltage at pin 1 of U1301 shall be  $0.52V \pm 0.1V$


**LCD Color:**

1. Send the command "screen t"
2. Confirm that the following pattern appears on the LCD:

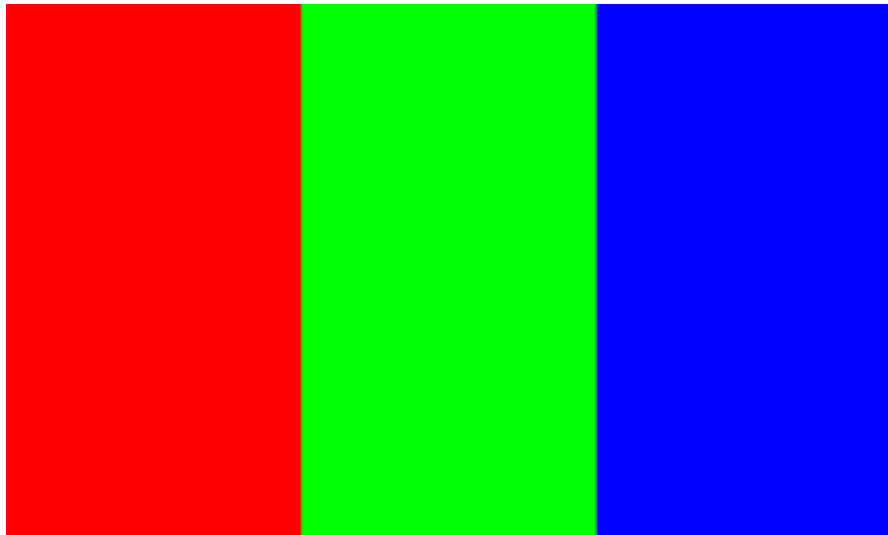**Touchscreen:**

1. Send the command "screen c"
2. Follow the prompt on the LCD to calibrate the touchscreen:



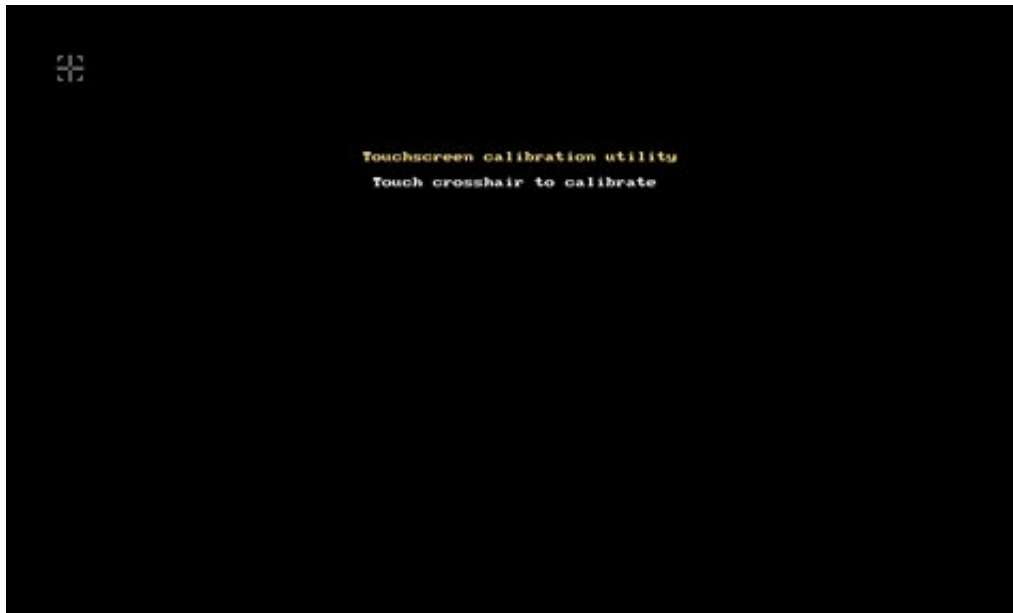

3. Follow the prompt on the LCD to test the touchscreen. Touch the touchscreen in several places and ensure that the cursor moves to that location. Touch “Quit” on the LCD to exit.



**Backlight Driver:**

If no LCD is included in the fixture, the previous two sections can be ignored. If it is included this section can be skipped.

1. Connect a 15Ω 1.5W resistor between nets LCD\_BL\_P and LCD\_BL\_N
2. The voltage at LCD\_BL\_P with respect to GND shall be 4V +/- 10%
3. For reference, the max current of the backlight circuit is 269mA

#### **Backup Camera:**

There are two options for this test.

##### Option 1:

1. Plug in backup camera to J6
2. Run command "screen m"
3. Visually verify LCD shows the camera image without aberration

##### Option 2:

1. Emulate the camera data using a DAC and apply to J6-4
2. Run command "screen m"
3. Verify the decoder is working by reading the digital output of the decoder and compare to the DAC input

#### **CAN Bus Loopback Test:**

The baud rate for CAN 0 is 500kbps. CAN 1 is 125kbps.

1. Write to the DUT by sending the following CAN command: **Write object 0x687D sub-index 0x01 with data [12 AB CD EF]**
2. Read data back from the DUT by sending the following CAN command: **read CAN index 0x3080 subindex 0x01**
3. The response shall have the data **0x12ABCDEF**
4. Do the test twice. Once for CAN Bus 0 and once for CAN Bus 1.

#### **RS-232:**

1. Connections: J18-1 is RS232 RXD, J18-2 is RS232 TXD
2. Run command to enable RS-232
3. Send data from computer to RS-232 port
4. The UI will echo back the data sent
5. Confirm that the data received at the computer matches what was sent

#### **UART (5V):**

1. Connections: J4-4 is 5V UART RXD, J4-5 is 5V UART TXD
2. Send command uart4

3. Send data from computer to UART port
4. The UI will echo back the data sent
5. Confirm that the data received at the computer matches what was sent

**USB Host:**

1. Connect a flash drive or generic storage device to J5
2. The storage device shall have the file X.txt on it
3. Run command “usb h”
4. The response must include “USB checking for file "X.txt": OK”

**USB device:**

1. Connect J7 to a computer
2. Verify the PID and VID of the device