



Models: T7,
Speed Scrub Rider

Accelerator and Brake Pedal Spring Replacement Kit

This kit is intended for model serial numbers between 10206994-10278484 (In Europe, before s/n T7.... 0894)
The purpose of this kit is to ensure operator safety from a potential pedal malfunction.

INSTALLATION INSTRUCTIONS:

Installation Time: 1 Hour

TOOLS REQUIRED: 13mm & 19mm socket wrench, 13mm open end wrench, flat head screwdriver, vise grips and rubber mallet.

FOR SAFETY: Before installing new springs, park machine on a level surface and remove key.

1. Remove steering wheel cap.



2. Remove steering wheel mounting hardware using a 19mm socket wrench.

NOTE: When replacing steering wheel torque nut 21ft/lb (28.5 Nm)



3. Remove steering wheel by tapping on spokes with rubber mallet. Be careful not to misplace the shaft key.



Kit Contents

Part No.	Description	Qty.
1031716	SPRING, EXTN, 0.50OD X 0.07WIR, 3.0L	2


4. Remove rubber boot from steering shaft.



5. Remove the 4 steering column bolts using a 13mm socket wrench.




6. Carefully slide the rotomold housing upward about 6"/15cm to access the pedal assembly. Use vise grips to hold housing in place.

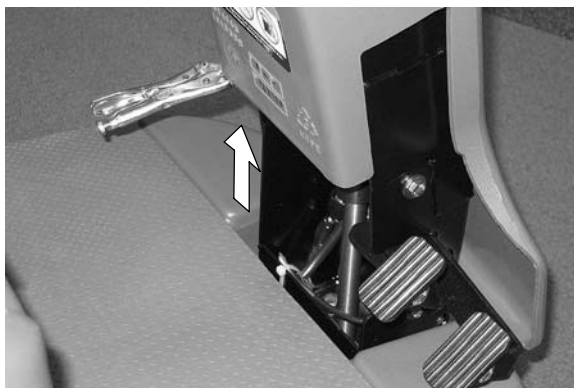


Accelerator and Brake Pedal Spring Replacement Kit

INSTALLATION INSTRUCTIONS - Continued

7. Unplug the pedal assembly wire harness.

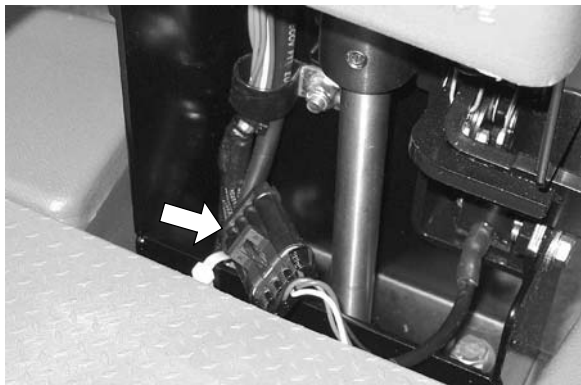

8. Remove the 2 pedal assembly mounting bolts using a 13mm wrench.

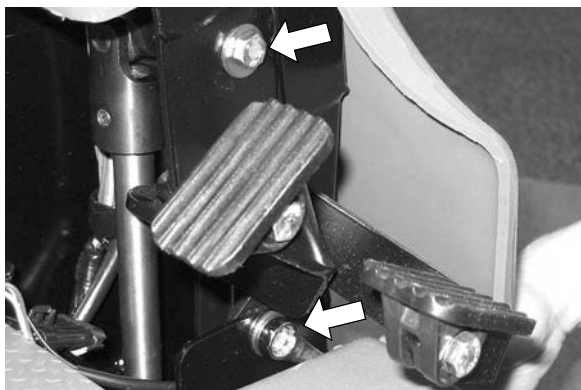

9. Remove the pedal assembly from the machine.




10. Using a spring puller or screwdriver, remove the 2 springs from the pedal assembly and dispose.

Install new springs. DO NOT use vise grips or needle nose pliers, spring damage may result.



The new springs have a larger radius bend at the hook end.

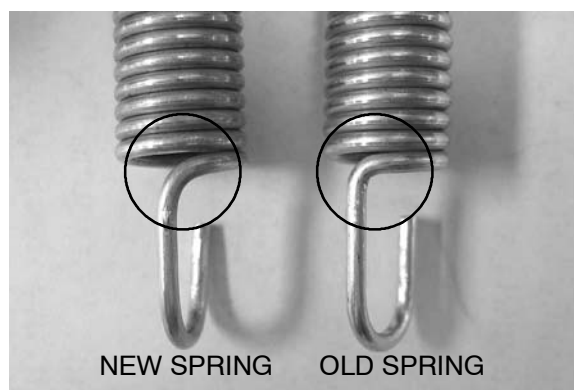

11. Follow the instructions in reverse order to reassemble the machine.
12. Test pedals for proper operation.