

DATE: 03-18-02

Technical Service Bulletin

PRODUCT(S)
AFFECTED:

SUBJECT: Side Brush Adjustment – During machine installation, the side brush support bracket must be adjusted down from the shipping position.

PURPOSE: To achieve optimum performance and to prevent potential damage to side cover. Follow the Side Brush Adjustment instructions as described below.

NOTES: This procedure will be factory performed in the near future. Contact the Custom Service Department at 1–800–982–7658 or (616) 786–2330 with questions.

Side Brush Installation and Adjustment:


- 1. Switch the side brush lift lever to the OFF position and remove the key.
- 2. Tilt machine back and remove the screw and washer from the side brush drive shaft.
- 3. Position the brush on the shaft and replace the washer and screw using a 10mm wrench.



- 4. Remove the front Hopper.
- 5. Locate the two adjustment screws on the inside right front corner.
- 6. Using a scribing tool, etch a small mark around the top edge of both flat washers. These marks will be used as reference points.



- 7. Loosen both screws using a 5mm Allen Wrench.
- 8. Lower the Side Brush down a minimum of 1/8". Use the reference marks to measure the movement.

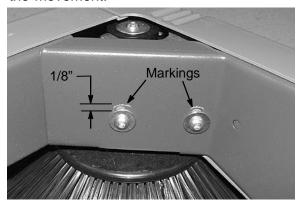

- 9. Re-check adjustment and tighten both screws.
- 10. Replace Hopper and test the side brush for proper operation.