



TECHNICAL SERVICE BULLETIN 980530-007

DATE: Revised 01/01/98 page 1 of 2


TITLE:
FRONT WHEEL DRIVE GEARBOX

APPLICABLE MACHINES:
530E

SYNOPSIS:

The front wheel drive gearbox might leak after only a few hours of operation.

To stop the leaking, first check the fluid level and drain any excess fluid. Then remove the 3 bolts located below the oil filling hole. Clean and apply Loctite #515 or #242 and torque to 17 ft lbs. Use 90 wt gear lube, capacity is 2.7 liters.

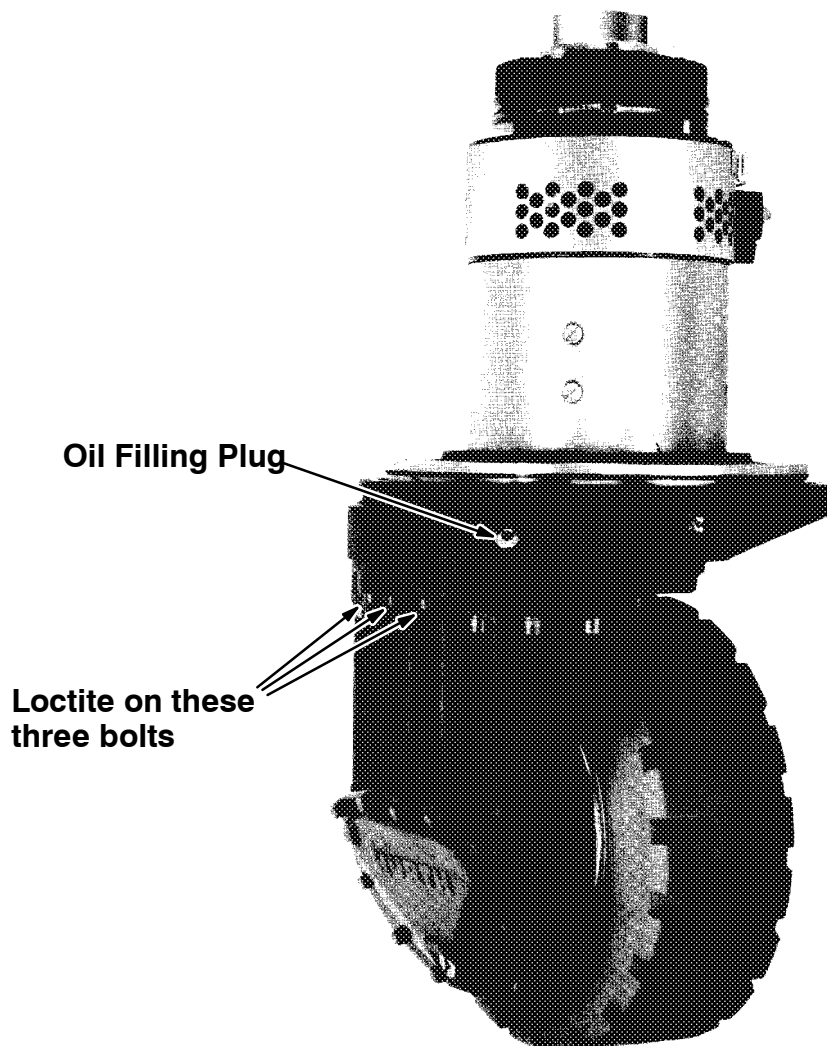

DRIVE GEARBOX

SCRUBBER

