




Double or triple your available Orbio® 5000-Sc solution volume with auxiliary tanks

Create, store, and dispense an additional 135 gal / 511 L or 270 gal / 1,022 L of 5000-Sc solution by adding one or two auxiliary tanks to the 5000-Sc. These tanks are:

- Purpose-designed for use with the 5000-Sc
- Durable
- Easy to install

Install one or two tanks when peak demand exceeds the standard 5000-Sc 120 gal / 454 L tank capacity on a regular basis, such as when filling multiple large cleaning machines or solution transport carts at one time.

Multiple Configuration Options

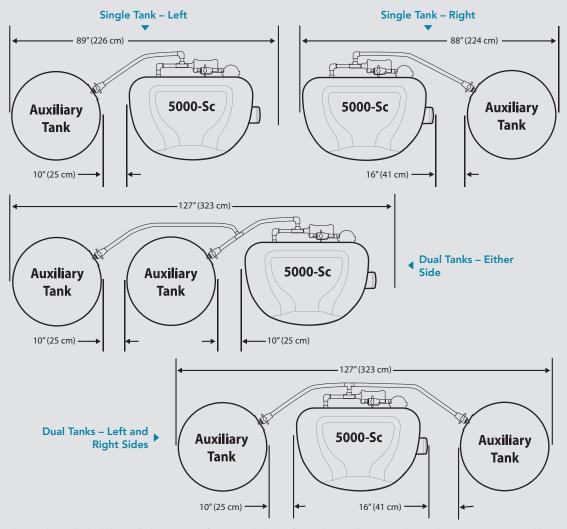

5000-Sc unit and any auxiliary tanks should be installed on an even surface so that the bases of a complete installation are at the same level. A 16" gap is required between an auxiliary tank and the right (inflow filter) side of the tank to allow for access to the inflow filter.

Single and Dual Auxiliary Tanks

STANDARD CONSTRUCTION	
Expansion tank	0.25 in / 6.4 mm wall thickness polyethylene, 8 in / 203 mm diameter vented lid, clear with gallon markers
Connection hose	Braided 1 in / 25 mm ID PVC
Fittings/Ball valves	PVC
Hose clamps	Worm-drive, stainless steel
DIMENSIONS/WEIGHT/CAPACITY	
Height	65 in / 1,651 mm
Diameter	28 in / 711 mm
Weight (empty)	56 lbs / 25.5 kg
Weight (filled)	1,183 lbs / 538 kg
Usable capacity	135 gal / 511 L

Each tank comes complete with connection hose, fittings, ball valve, clamps, safety/regulatory labels, and installation instructions. For dual tank configurations, order two tanks - all necessary fittings and hoses are shipped with the tanks. Specifications subject to change without notice.

To learn more about the Orbio® 5000-Sc Single and Dual Auxiliary Tanks and other innovations in cleaning, contact Orbio today.

Orbio® 5000-Sc Single and Dual Auxiliary Tanks Sellsheet 2/12 @2012 The Tennant Company logo and other trademarks designated with the symbol "®" are trademarks of Tennant Company registered in the United States and/or other countries. Tennant Company's products are sold and serviced through subsidiaries of Tennant Company and distributors.



Orbio Technologies 701 North Lilac Drive Minneapolis, MN 55422 USA +1 800 553 8033 +1 763 540 1315 orbio.com

